

Editing a separation

1. Click the **Plate Builder Tool** button to start a Plate Builder session.
2. In the Properties Editor dialog box, in the **Separation** list, select **Edit Separation List**.
3. Click **Edit**.

Note: You can only edit separations that you added with Plate Builder.

4. Modify the separation values, and click **OK**.
5. In the Edit Separations dialog box, click **OK**.