

Removing objects from a separation

1. Click the **Plate Builder Tool** button to start a Plate Builder session.
2. Select an object or objects.
3. On the Plate Builder toolbar, click **Remove selected objects from separation.**
4. In the Remove Selected Objects from Separation dialog box, select an object.
5. Click **OK**.

The highlight color returns to the **Object Selection** color.