

Prinergy VPS windows

This topic describes the windows in the Prinergy VPS software. Use the items on the **Window** menu to show, hide, and arrange windows and palettes.

Main window

The main window is the window in which you view the image. Actions such as zooming in and out and turning separations on and off affect the image in this window. Measuring is done here. In the main window, use the scroll bars or the **Pan** tool to move the image.

Separations palette

The **Separations** palette shows which separation files are open in the main window and which separations are currently turned on. Use the **Separations** palette to:

- Change transparency
- Change ink opacity and laydown
- temporarily change ink color
- Display the preview file name for a separation

Navigation palette

The **Navigation** palette shows which part of the image is currently displayed in the main window. Use the **Navigation** palette to orient yourself, to move the selection rectangle (which in turn moves the image in the main window), or move and resize the image by drawing a marquee.

Measurement palette

The **Measurement** palette shows the results of a measurement, as well as the current position of the pointer relative to the upper-left corner of the press sheet. The **Measurement** palette is automatically displayed when you select **Measure Tool** from the **Tools** menu. You can also display the **Measurement** palette by choosing **Show Measurement Palette** from the **Window** menu.