

Using the Pan tool

1. From the **Tools** menu, select **Pan tool**, and perform one of the following actions:
 - In the main window, position the hand over the image, and drag to move the image.
 - In the **Navigation** palette, position the hand over the selection rectangle, and drag to move it.

The main window displays the area now enclosed by the selection rectangle.

2. When the **Measure** tool, the **Densitometer** tool, or the **Zoom** tool is active, press the space bar to enable panning.

See Also

- [Tool shortcut keys](#)