

To purge a job from disk

Once a job has been archived, you can then purge it to free the space on your job volume.

1. In Job Manager, select the job button at the bottom of the window.
2. Drag the selection onto an purge process template in the **Process Templates** pane.
3. In the Start Process dialog box, click **OK**.

Note: For more information about purging, see the *Prinergy System Administration Guide*.