

Adjusting the layout details for a product

Use this method to set page positioning and shingling values for an entire product.

Requirements:

The job must be open.

1. Select **Job > Layout Details**, or use the keyboard shortcut CTRL/CMD + I.
2. If page offsets are required, select the product in the **Page Position Adjustment** area.
3. In the **Page Position Adjustment** area, type **Horizontal** and **Vertical** offset amounts for all the **Odd** pages and **Even** pages.

Note: This overrides the **Autocenter run list pages** setting on the **General** tab of the Preferences dialog box. You can override these values for selected content pages.

4. If shingling is required, select the product in the **Shingling (Creep)** area, and set the values as needed.

For details, see the related topic about shingling the page images.

Note: You can override these values for selected template pages.