

Template page properties (common)

In the **Press Runs** workspace, select a page, and, in the **Properties** pane, select the **Template Page** tab to display its settings. Template pages define the positioning of content pages on press-run layouts.

Page Number, Section	The front and back page numbers and the section numbers determine the flow of the run-list pages. When you duplicate or copy ganged or independent pages, the template page numbers are retained. However, if you duplicate an entire press run that contains a layout, the page numbers increment sequentially in the new press run.
Finished Page Size, W, H	The final width and height of the printed and trimmed product page. The default dimensions are defined on the General tab in the Preferences dialog box.
Reference Point	The corresponding corner or center point on both the sheet and the page, from which Position on Sheet offsets are measured. This point remains constant when rotation is applied.
Position on Sheet, H, V	The horizontal and vertical offset distances between the reference point and the lower-left page corner
Locked	Imposition pages are always locked into their Position on Sheet and Reference Point, which is always the lower-left corner. Rotation can be applied, because it does not change the reference point.
Page Orientation	The head direction of the template page, which can be up, right, down, or left
Content Bleed Limits	The maximum bleed to allow on each page edge. By default, all four edges use the default bleed limit. To edit the values, use the check boxes: • Select the Use default check box to apply the default limit that is defined on the General tab in the Preferences dialog box. • Select the Use symmetrical margins check box to apply the Top width to all four edges. • Clear the Use symmetrical margins check box to activate all the text boxes, and then specify the individual widths.