 
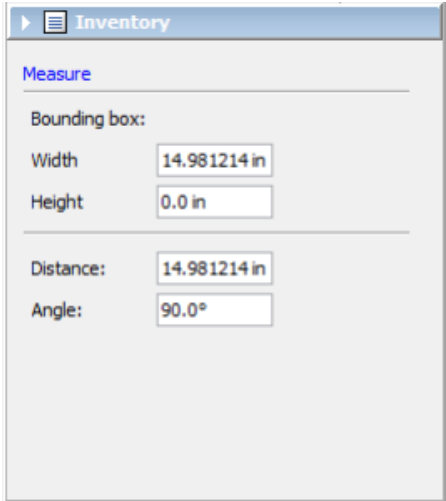


Commercial Toolbar

Which Tools are visible in the Toolbar depend on whether you are in Commercial Mode or Packaging Mode.

Commercial Mode Tools

Tool	Tool name	What you can do with this tool
	Job Browser	Allows you to add multiple impositions by selecting a folder containing the imposition separations
	Open...	Allows you to open a set of Front or Back Imposition separations
	Add Files	Allows you to add additional separation files to a set of separations that are already open
	Zoom to Fit	Zooms the view to the maximum size that fits the open imposition viewing window
	Zoom Out	Zooms out one viewing level for each click.
	Zoom In	Zooms in one viewing level for each click. Hold down the CMD/CTRL button to get the Zoom In, when any other tool is active.
	Rotate Left	Rotates the selected separation 90 degrees to the left
	Rotate Right	Rotates the selected separation 90 degrees to the right
	Zoom Levels	Allows you to select a desired zoom level
	Imposition Information Palette	Allows viewing of embedded imposition information. Individual options can be selected or deselected.
	Show/Hide Imposition	Shows or Hides selected Imposition information
	Show/Hide Press Sheet Edge	
	Show/Hide Bleed Edges	
	Show/Hide Page Edges	

	Show/Hide Page Numbers	
	Show/Hide Type Safety Edges	
	Measurement Tools Palette	
	Show/Hide Rulers	Toggles Ruler visibility.
	Show/Hide Guides	Toggles Guides visibility.
	Viewing Tools Palette	
	Pan Tool	Click and drag to roam around a surface when zoomed in. You can also get the Pan tool when any other tool is selected by holding down SPACEBAR.
	Measure	Click to set a measure point and hold the mouse button down as you drag to set a second measure point. Hold SHIFT to constraint the measurement to horizontal or vertical. Measurements display in the Measure section of the Inventory panel. 
	Zoom Rectangle Select Tool	Allows you to select a rectangular area to enlarge the area to the largest viewing level and fill the screen. Clicking with the Zoom Rectangle tool acts like the regular zoom tool, and will zoom in one level. Holding SHIFT and clicking will zoom out one level.

	Color Densitometer	Click and drag to define a rectangular area. The Inventory > Separations panel will display the Tint %, linescreen Ruling and screen Angle of the separations in the selected area.
	Compare	Allows you to compare pixels in an open separation (or set of separations) to another separation (or another set of separations). Unique pixel differences are shown in Red or Blue, and common pixels are shown in grey.
	Select	Use the Select Tool to position ruler guides.