 
 


VPS+ Using slugs in a corrugated job (Packaging mode)

 
Creating a slug

When slugs are selected, they appear in orange. When not selected, they appear in the color of the separation they are on. Each slug appears with a number to identify it (slug ID). After it is created, the slug is added to the list of slugs on the **Slugs** tab of the **Inventory** palette.

1. From the **Inventory** palette, clear the check boxes next to the separations that do not contain data that you want to include in the slug.
Or, clear all separations except for one, create the slug, and then select each of the other separations to see where the data is common. Then, on the **Slugs** tab, select the slug, right-click it, and select **Apply To** the relevant separations.
2. Click the **Rectangular Marquee**  tool, then, in the display window, drag the mouse pointer over the area that you want to include in the slug and release the mouse button.
 - To resize the area of the slug, click the **Select**  tool and drag one of the slug's sizing handles.
 - To move the slug, click the **Select** tool, hold the left mouse button inside the slug rectangle, and then drag the pointer to the new location.
 - To change the slug's zoom level so that the slug fills the entire display window, right-click the slug and select **Zoom-Fit Selection**.
3. Repeat steps 1 and 2 for each slug that you want to create.
4. (Optional) To prevent media wastage, you can minimize the slug area around the image.
To do so:
 - a. On the **Inventory** palette, on the **Slugs** tab, select the slug or slugs.
 - b. Right-click your selection and select **Auto-Fit Slug**.
Use the [Auto-fit margin preference](#) to define the size of the margin around the data when you use the **Auto-Fit Slug** option.

Adding registration marks to a specific slug

 
You can add registration marks to a slug or slugs as soon as you create the slug. The marks are placed on the left and right sides of the slug (in the midpoint of the auto-fit margin, if there is such a margin) and are centered vertically.

1. Select the slug or slugs by clicking the **Select**  tool and then clicking the slug or slugs in the display window (or by dragging the pointer around the slug/s that you want to select).
2. In the display window, right-click one of the selected slugs, and select **Add Registration Marks**.

Alternate method:

From the **Inventory** palette, on the **Slugs** tab, select the slugs to which you want to add registration marks, right-click them, and select **Add Registration Marks**.

Applying slugs to another separation

 
1. Select the slugs by clicking the **Select**  tool and then clicking the slugs in the display window (or by dragging the pointer around the slug/s that you want to select).
2. In the display window, right-click one of the selected slugs, select **Apply to**, and then select the separation to which you want to add the slugs.

Alternate method:

1. From the **Inventory** palette, on the **Slugs** tab, select the slugs that you want to apply to another separation, right-click them, and select **Apply to**.
2. Select the separation to which you want to add the slugs.

Merging slugs

You may want to merge slugs and then check the **Cost** tab of the **Inventory** palette to see whether merging the slugs lowers or raises the cost of the corrugated job. The total cost before you merged the slugs is displayed in parenthesis on the right of the current total cost.

1. Select the slugs by clicking the **Select**  tool and then clicking the slugs in the display window (or by dragging the pointer around the slug/s that you want to select).
2. In the display window, right-click one of the selected slugs, select **Merge Slugs**.

Alternate method:

1. From the **Inventory** palette, on the **Slugs** tab, select the slugs that you want to apply to merge.
2. Right-click the selected slugs, and select **Merge Slugs**.

Saving the slugs for a corrugated job

After you finish creating the slugs for your job, you can arrange the slugs on a layout for output. You can also save each of the slugs as a TIFF file in a folder of your choice, and arrange them on a layout at a later time.

1. From the **File** menu, select **Output**.
2. In the Select Output Slugs Folder dialog box, browse to the location where you want to save the slugs, and click **Select**.

Arranging slugs on a layout

 
When you finish creating all of the slugs for the corrugated job, you arrange (compact) the slugs on a layout and output the layout.

- From the **Modify** menu, select **Switch to Layout**. The slugs are arranged on a layout (defined according to the parameters of the default layout preset) as close to one another as possible (to minimize the area of the plate).

 
Copying the slugs to an open layout

1. In the display window of Job Planning mode, select the slug or slugs that you want to copy to the layout.
2. From the **Edit** menu, select **Copy**.
3. In the display window of the layout, from the **Edit** menu, select **Paste**.
The slug or slugs are added to the **Unassigned Files** list.
4. From the **Inventory** palette, drag the slug or slugs from the **Unassigned Files** box to the layout window.
5. To arrange slugs automatically, see [Arranging files on a layout automatically 10](#).

Deleting a slug

1. Select the slug by clicking the **Select**  tool and then clicking the slug in the display window.
2. In the display window, right-click the selected slug, and select **Remove**.

Alternate method:

1. From the **Inventory** palette, on the **Slugs** tab, select the slugs that you want to delete.
2. Click .