

Sleeve Planning preferences

Enable sleeve planning mode

To plan and output a continuous sleeve job, you must select this check box.

If you enable this option, the **Switch to Sleeve Planning** tool  appears in the toolbar, and the **Sleeve Planning** option is available from the **Modify** menu.

All the other preferences described here determine the default settings for Sleeve Planning mode.

Rotate TIFF files in preview

If the incoming plate-on-sleeve jobs require rotation before wrapping, select this check box and the degree of rotation.

Sleeve planning calculates and displays the seamless dimension in the Y direction. If the TIFF file has been imaged with the seamless dimension in the X direction, it must be rotated in order to view the seam and confirm that screening meshes correctly at the seam.

Rotate output files

If the sleeve jobs require rotation after wrapping to suit the orientation of the output device, select this check box and the degree of rotation.

Close the preview window when switching to this mode

Select this check box to close the preview window when switching to the sleeve planning mode.