


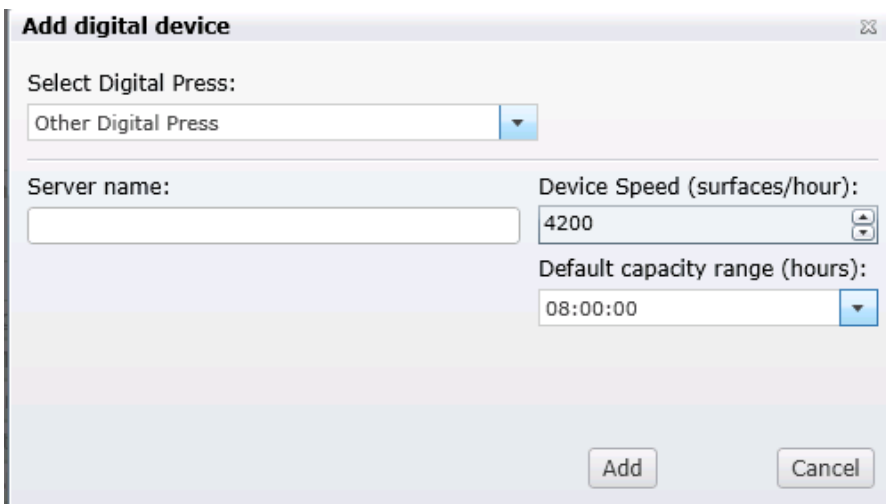
# Set up Prinergy for digital output

To perform digital output in Workshop, you need to perform the following steps:

1. Add a digital device in the Setup application.
2. Import the substrates.
3. Create a job.
4. Add, refine, and assign an input file.
5. Adjust job specific parameter if necessary.
6. Select the **Send to Digital** option.
7. Update the Digital Job Ticket Editor settings.
8. Submit the job to the connected digital device.
9. Review the job progress in Track.

## Add a digital device to Prinergy

1. In Prinergy Workshop, from the **Tools** menu, select **Setup**.  
**Note:** if this is the first time you use Setup, it will be automatically installed on your computer.
2. In the left pane, click the arrow next to **Equipment**.
3. Click **Digital Device**.
4. Click the **Add digital device**  button.
5. In the Add digital device dialog box, in the **Select Digital Press** list, select the required digital device and in the **Server name** box, type the digital device's IP address or server name.



**Add digital device**

Select Digital Press:  
Other Digital Press

Server name:

Device Speed (surfaces/hour):  
4200

Default capacity range (hours):  
08:00:00

Add Cancel

6. Click **Add** and wait a few seconds until the device is added to the **Digital Device** list.
7. Select the device to view the device details and capabilities in the pane on the right-hand side.
8. In the pane on the right-hand side, where all the device details appear, click the **Import Substrate** button.

9. In the message that appears, select whether to overwrite or skip substrates with the same name.

The digital device paper catalog names appear in the **Substrate** list on the **Material > Substrate** tab, and in the **Substrate** list in the Digital Output window of Prinergy Workshop.

**Note:** If the substrate list on the connected device is updated, the user can import the substrates again in Setup.