

MIS connector (two-way)

For two-way JDF connectivity, use the **MIS Connector** pane on the **Configuration** tab to set up and specify details about communication with the MIS server.

- [Two-way data flow overview](#)
- [Configuring the MIS connector for JDF connectivity](#)