

Prinerger prepress workflow connector

Use the **Configuration** tab to set up communication between the Business Link software and the Prinerger server, and to define where and how Prinerger creates and names the jobs.

Note: If the MIS uses Kodak JDF extensions for Business Link to provide values for the same options that you set in the **Configuration** tab, the MIS values will take precedence. For more information, see the MIS documentation.

- [Configuring the Prinerger workflow connector](#)
- [Prinerger job name format](#)