



## Objectif 5 – Ajouter et reproduire un repère


1. From the upper-left corner of the rulers section, drag the cross-hair symbol to the upper-left corner of the substrate.  
The upper-left corner of the substrate is now the 0 point.
2. Drag some guides onto the layout:
  - a. Click and drag a guide from the vertical ruler section and place it 5 in. (126 mm) in from the left side margin.
  - b. Add another guide from the horizontal ruler section and place it 11.5 in. (292 mm) in from the top of the substrate.

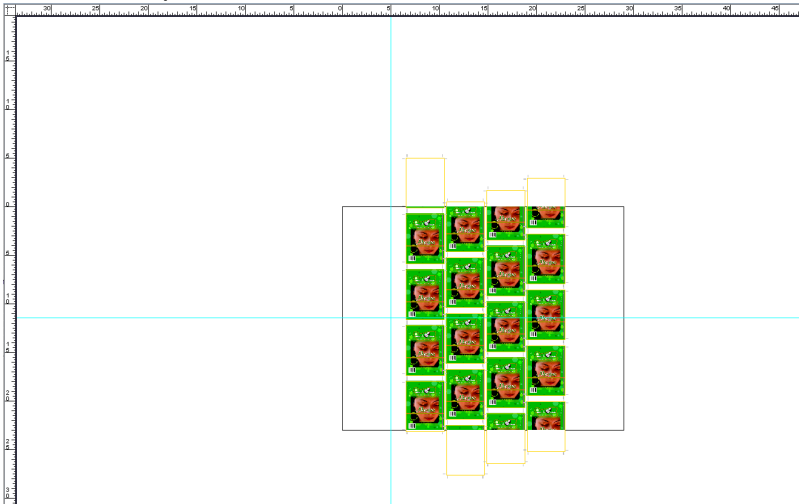


3. From the **Window** menu, select **Show Marks Palette**.
4. Open the **Pandora** folder and drag the CAL\_2-tone.pdf mark into the left-center margin of the layout, close to where the ruler guides intersect.

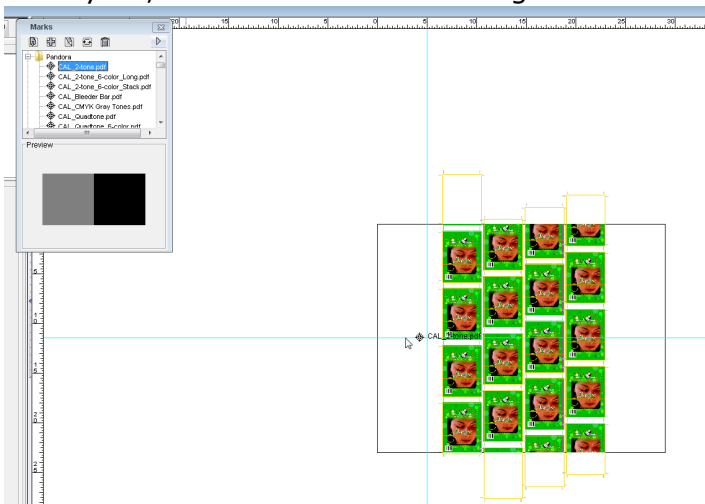

5. Using the **Zoom Tool**  and **Selection Tool** , center the mark on the intersection of the ruler guides.

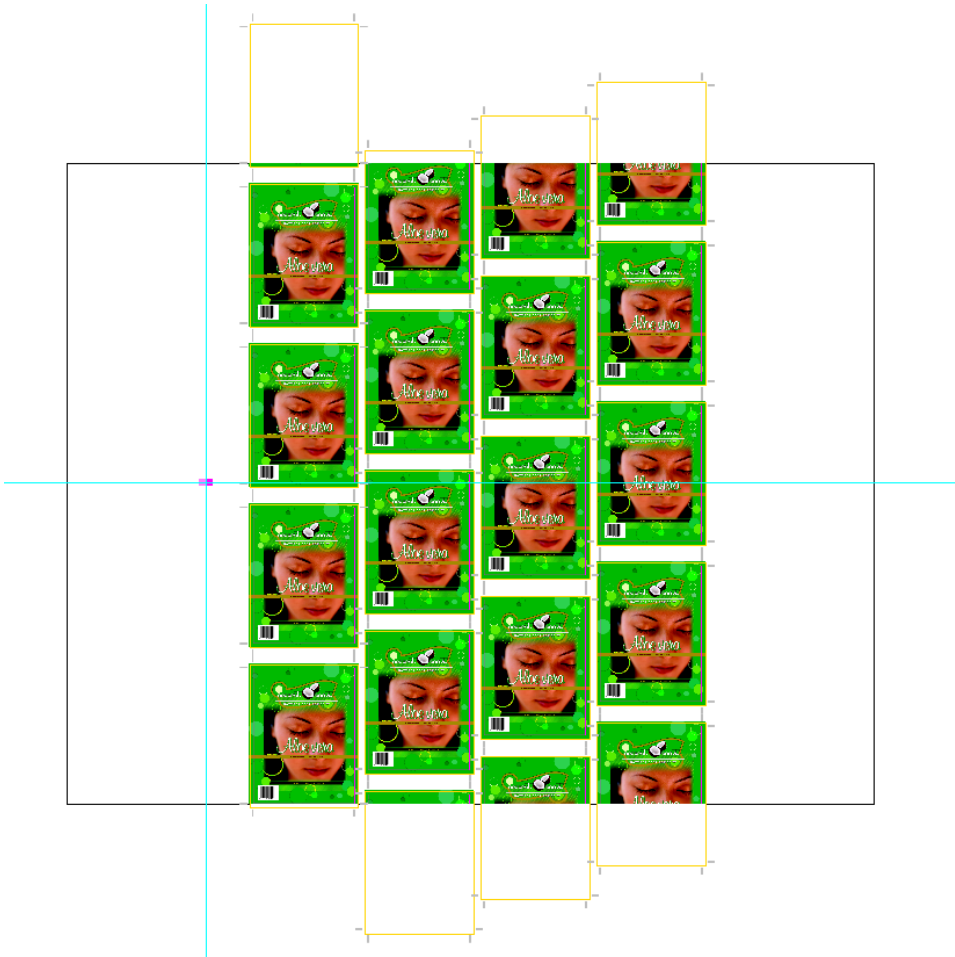

In the Attributes dialog window, the Output Color Attributes for the `CAL_2-tone.pdf` mark show that the mark will print as color DieLine.

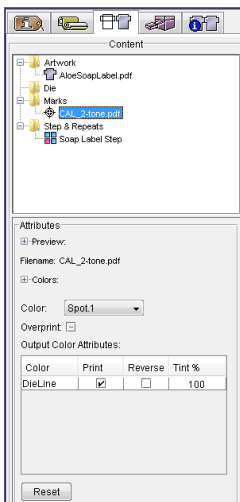

6. With the mark selected, in **Attributes** on the **Content** tab, change the **Color** from Spot.1 to PANTONE 349 U.

**Note:** To ensure that certain colorants are not used in marks, see information on setting Preferences for [Do not use in marks](#).


7. With the mark selected, perform one of the following actions:
  - Right-click and select **Duplicate**.

- From the **Object** menu, select **Duplicate**.

The Duplicate dialog box opens. The Duplicate dialog box enables you to copy and paste selected objects, and adjust the distance between these objects. For example you can create a series of micro dot marks, and then adjust each of these marks individually.

8. In the Duplicate dialog box, enter the following information and click **OK**:

<b>Repeat:</b>	Horiz: 3
<b>Distance:</b>	9.75 in. (247.65 mm)

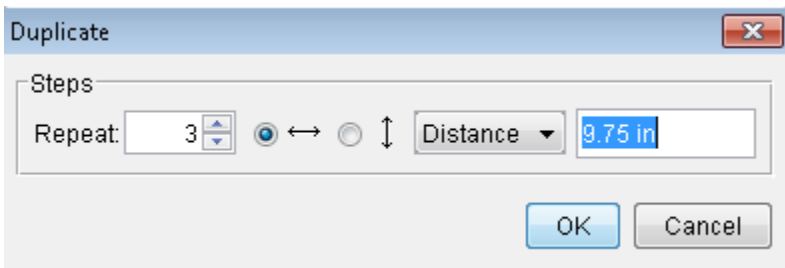

9. From the **View** menu, select **Fit In Window**.

In the Layout view, notice CAL\_2-tone.pdf is duplicated three times across the substrate. Note that you can select each mark individually and move or edit them, unlike when you step-and-repeat a mark in which all objects move together.

